SEIKO


DIGITAL QUARTZ

Cal. BOO4A

Cal. B004A





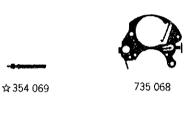






















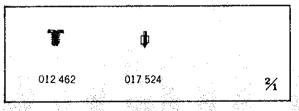

Cal. B004A

Characteristics

Casing diameter :

Ø 17.5 mm

Maximum height :

4.4 mm without battery

Frequency of quartz crystal oscillator : 32,768 Hz (Hz=Hertz..... Cycles per second)

Display medium : Nematic Liquid crystal, FE-Mode.

Regulation system : Trimmer condenser

Time and calendar display:

Alarm display: Timer display : Time signal function : Sound demonstration:

PART NO.	PART NAME	PART NO.	PART NAME
☆354 069	Winding stem		
735 068	Winding stem holder		
4001 216	Circuit block		
4238 001	Switch lever spring		
4246 015	Lead terminal (+)		
4247 008	Winding stem holder bush		
74247 009	-	1	
4256 006	Speaker block fixing spring		
4313 036	Connector		
4398 213 } 24398 335 }	Speaker block frame		
4450 010	Switch lever		
4510 062	Liquid crystal panel (Silver)		
4510 063	Liquid crystal panel (Gold)		
4580 062	•		
34580 064	Speaker block		
☆4991 002 \	Speaker gasket		
4991 152	· -		
012 462	Winding stem holder screw		
017 524	Switch lever pin		
\$ Maxell SR72†W \	Silver oxide battery		

Remarks :

Winding system

☆354 069 ······Refer to the photograph on the front page.

If the combination of the winding stem and case is unknown, check the case number and refer to "SEIKO Quartz Casing Parts Catalogue" to choose a corresponding winding stem.

Winding stem holder bush, Speaker block frame, Speaker block, Speaker gasket

☆4247 009 **☆4398 335** ☆4580 064 ☆4991 002

The parts designated with these parts numbers are manufactured specially for the water resistant case of a pressure of 10 atmospheres (100 meters or 300 feet). Be sure to use these parts for keeping high-water resistant quality.

Liquid crystal panel

⇒ 4510 062 } Be sure that combination between the color of panel cover and liquid crystal panel should ⇒ 4510 063 } Be matched according to the "SEIKO Quartz Casing Parts Catalogue."

☆ Maxell SR721W

★ SEIKO TR721W

The substitutive battery might be added to the applied battery in the future. In that case please refer to separate "BATTERY LIST FOR SEIKO QUARTZ WATCHES".

TECHNICAL GUIDE

SEIKO DIGITAL QUARTZ

CAL. B004A






CONTENTS


t.	SPECIFICATIONS	1
H.	STRUCTURE OF CIRCUIT BLOCK	1
ш.	DISPLAY FUNCTION	2
IV.	DISASSEMBLING, REASSEMBLING AND LUBRICATING OF CASE	3
V.	DISASSEMBLING AND REASSEMBLING	4
	1. Liquid crystal panel side	4
	2. Battery side	5
	Relationship between the segment (Liquid crystal panel electrode) and the C-MOS-LSI output terminal	6
VI.	CHECKING AND ADJUSTMENT	7
	Check battery voltage	7
	Check battery conductivity	7
	Check current consumption	7
	Check water resistance	8
	Check contact between C-MOS-LSI and liquid crystal panel	8
	Check liquid crystal panel and circuit block	8
	Check accuracy	8
	Check functioning	8
	Check alarm test system	9
	Check conductivity of switch component	9
	Check speaker block	9
	• Others	9

I. SPECIFICATIONS

	Cal. No.		
İtem		B004A	
Display medium		Nematic Liquid Crystal, FEM (Field Effect Mode)	
Liquid crystal panel driving system		Multiplex driving system	
Display system		Time function	
		Calendar function	
		Alarm function	
		Timer function	
Additional mechanism		Automatic calendar system	
		Hourly time signal	
		Alarm test system	
Loss/gain		Monthly rate at normal temperature range: Less than 15 seconds	
Module size	Outside diameter	φ17.5 mm	
	Height	4.4 mm without battery	
Regulation system		Trimmer condenser	
Measuring gate by quartz tester		Any gate is available	
Battery		SEIKO (SEIZAIKEN) TR721W, Maxell SR721W Battery life is approximately 2 years Voltage: 1.55V	

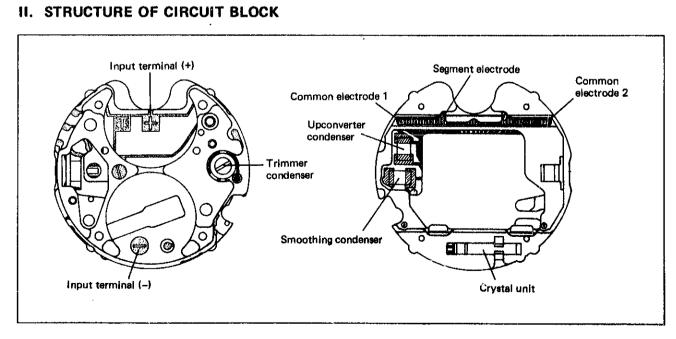

III. DISPLAY FUNCTION

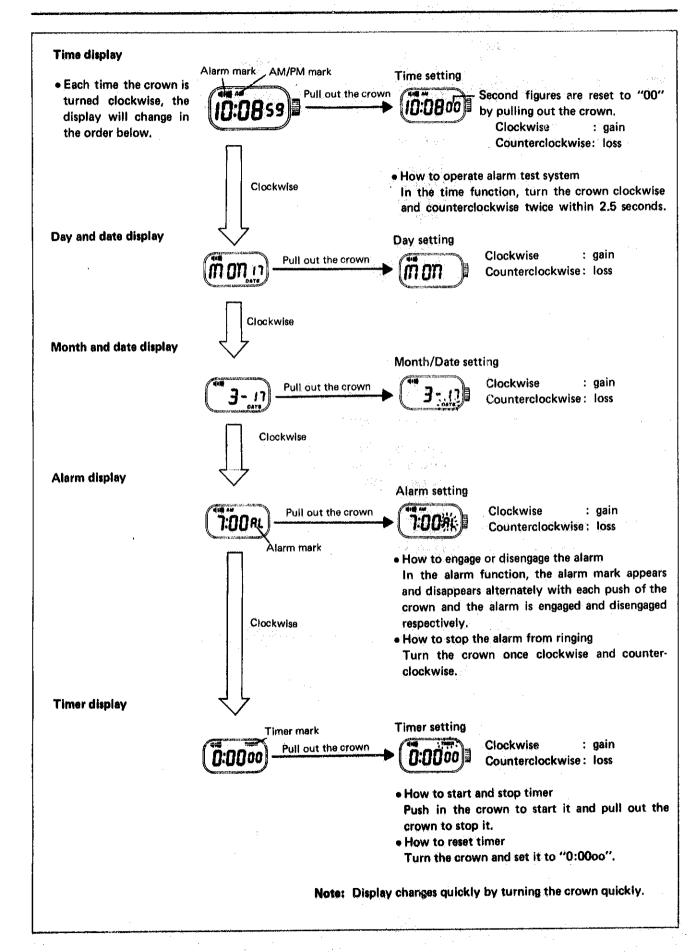


IV. DISASSEMBLING REASSEMBLING AND LUBRICATING OF CASE

Disassembling procedures: Figs. ① → ⑥

Reassembling procedures: Figs. 6 -> 1

Lubricating: SEIKO Watch Oil-S6

Never lubricate the portion marked (x)

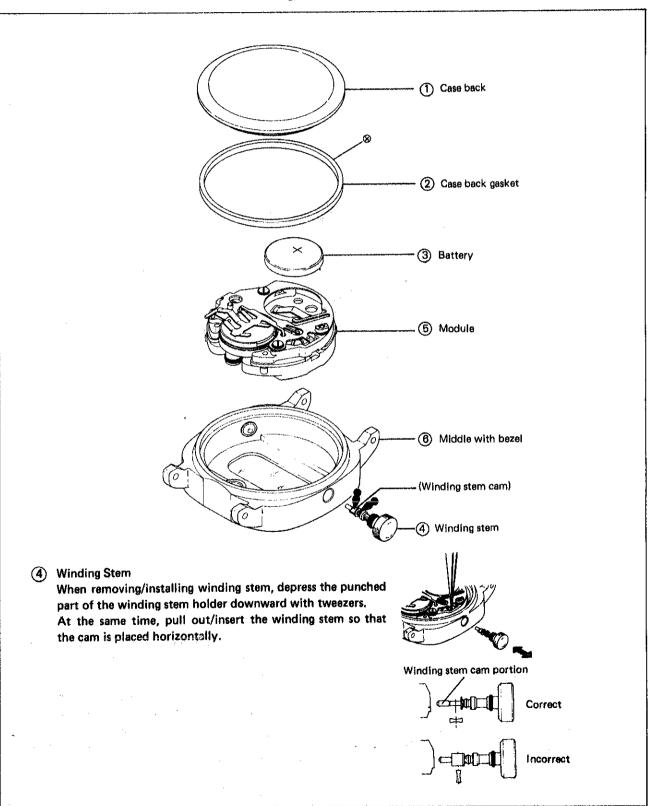


V. DISASSEMBLING AND REASSEMBLING


Disassembling procedures: Figs. (1)

Reassembling procedures: Figs; $(1) \rightarrow (1)$

1. Liquid crystal panel side

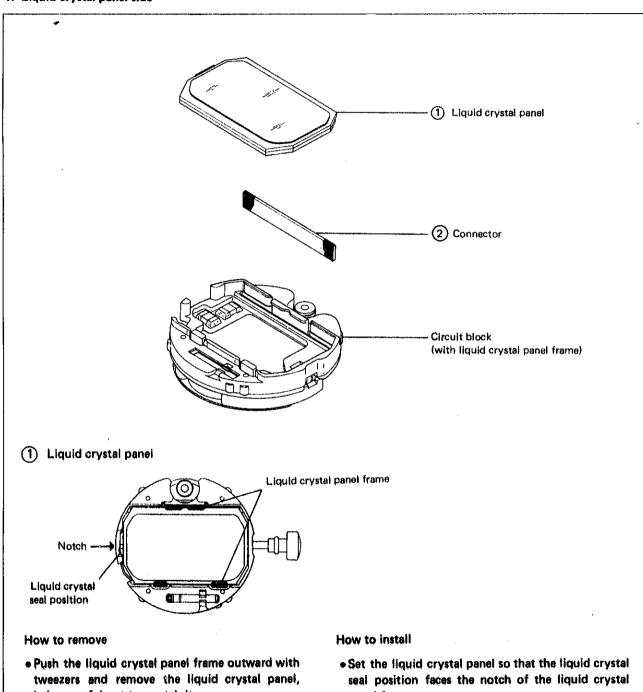


being careful not to scratch it.

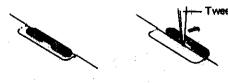


- panel frame.
- First, install the end of the liquid crystal panel (6 o'clock position). Then, insert the other end of the liquid crystal panel (12 o'clock position). After inserting the liquid crystal panel, depress the panel frame inward.

2. Battery side


3 Speaker block fixing spring When removing/installing the speaker block fixing spring, always hold the bent portion with tweezers,

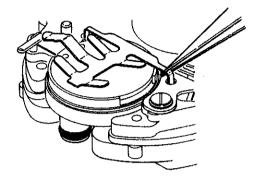


Install the switch lever as shown in the illustration below.

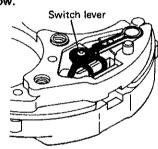


10 Switch lever pin The switch lever pin has a flat portion. When installing the switch lever pin, align the flat portion of the switch lever pin with that of the circuit block.

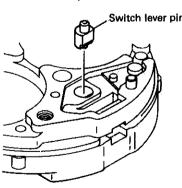

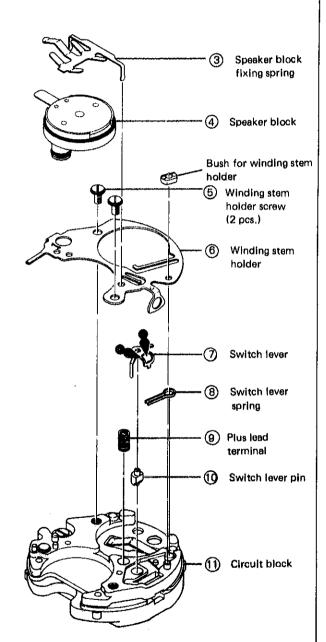

3. Relationship between the segment (Liquid crystal panel electrode) and the C-MOS-LSI output terminals

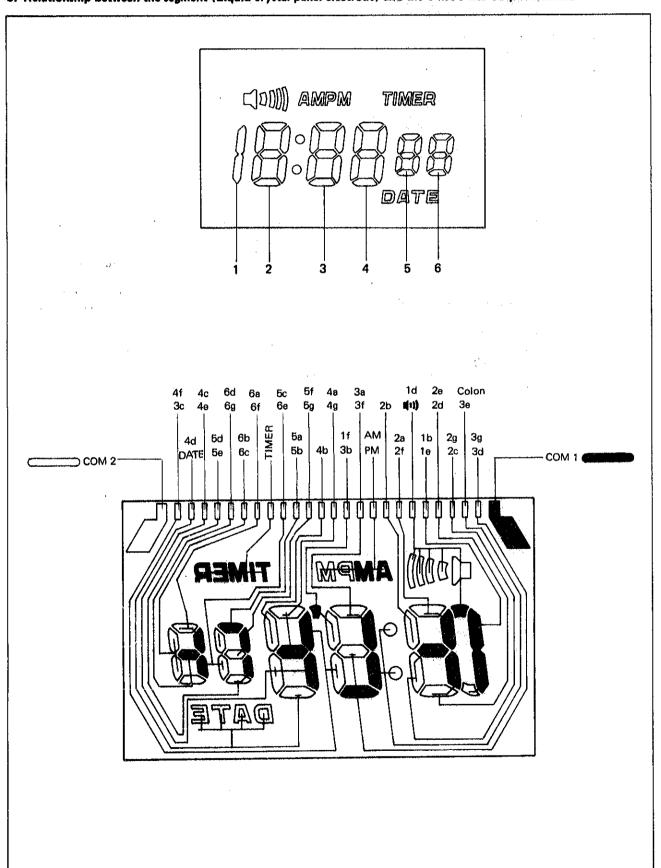

VI. CHECKING AND ADJUSTMENT

The explanation here is only for the particular points of Cal. B004A.

Refer to the "TECHNICAL GUIDE, GENERAL INSTRUCTION" for SEIKO Digital Quartz for ordinary checking and adjustment.

Proced	ure
CHECK BATTERY VOLTAGE	
Set up the Volt-ohm-meter. Range to be used: DC3V Red probe + Battery surface + Black probe Battery surface -	Result: Normal : More than 1.5V Defective : Less than 1.5V Replace the battery.
CHECK BATTERY CONDUCTIVITY	
CHECK CURRENT CONSUMPTION	
 Be sure to protect the C-MOS-LSI from light with black Do not check current consumption under an incade consume excess current. Set up the Volt-Ohm-meter. Range to be used: DC12µA 	paper etc., while measuring. escent lamp, since strong light causes a watch to
Red probe 🕂	nection (—) Result: surface (—) Normal : Less than 1.5μΑ Defective : More than 1.5μΑ *Replace circuit block or liquid crystal panel.

"How to find defects when the current consumption is more than 1.5μΑ.

Measure the current consumption of circuit block alone.

Normal: Less than 1.3μA
Replace the liquid crystal panel.

Defective :

Replace the circuit block,

Procedure

CHECK WATER RESISTANCE

CHECK CONTACT BETWEEN C-MOS-LSI AND LIQUID CRYSTAL PANEL

Refer to "Relation between the segment and C-MOS-LSI output terminal" and check for poor conductivity of the liquid crystal panel, connector and C-MOS-LSI output terminal.

CHECK LIQUID CRYSTAL PANEL AND CIRCUIT BLOCK

(1) Check to see if there are any broken wire, short circuit, etc. in the liquid crystal panel.

Set up the Volt-ohm-meter

Range to be used: OHMS x1 - x1K

Result:

Normal : Lights up


Defective: Does not light up.

Replace the liquid crystal panel.

(2) Check to see if the electric signal is transmitted correctly from the circuit block.

When measuring, be sure to remove liquid crystal panel, connectors and speaker block.

Set up the Volt-ohm-meter.
Range to be used: DC3V

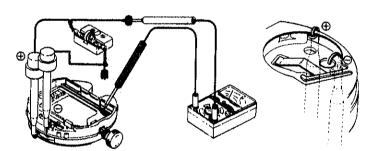

Result:

Normal: More than 0.8V Defective: Less than 0.8V

Replace the circuit block.

CHECK ACCURACY

- When measuring time accuracy, set the watch in the timer function where the timer mark is not flashing and the display is reset to "0:0000".
- Be sure to protect the C-MOS-LSI from light with case back or black paper, etc. while measuring.

Result:

Normal: Neither gain nor loss.

Defective: Either gain or loss.

CHECK FUNCTIONING

Procedure

CHECK ALARM TEST SYSTEM

In the time display, turn the crown clockwise and counterclockwise twice within 2.5 seconds and the alarm will ring five times.

Result:


Normal : Alarm rings

Defective—Alarm does not ring
Check speaker block
Display disappear

Replace battery.

CHECK CONDUCTIVITY OF SWITCH COMPONENT

- Check to see if the contact points of switch lever touch the circuit block in fully assembled module.
- With the middle with bezel assembled check to see if the display changes correctly by turning crown clockwise and counterclockwise.

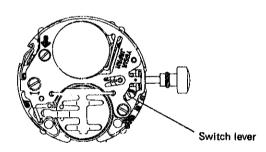

Result:

Normal : Operate correctly.

Defective : Do not operate cor-

rectly.

CHECK SPEAKER BLOCK

Set up the Volt-ohm-meter
Range to be used: OHMS x 100

Result:

Normal : $120\Omega - 140\Omega$

Less than 120Ω Defective— (Short circuit)

> L-More than 140Ω (Broken wire)

> > Replace speaker block.

OTHERS

If all segments are displayed and don't return to the normal display condition, open the case back and remove the battery. Then short circuit the battery connection (—) and winding stem holder with tweezers.