TECHNICAL GUIDE AND PARTS LIST

CAL. Y716A

DIGITAL QUARTZ


CONTENTS

I.	SP	PECIFICATIONS			
II.	DISPLAY FUNCTION				
III .	. DISASSEMBLING, REASSEMBLING, LUBRICATING AND CLEANING				
	1.	Disassembling, reassembling and lubricating of the case			
	2.	Disassembling, reassembling and lubricating of the module			
	3.	Cleaning			
IV.	. CHECKING AND ADJUSTMENT				
	1.	Guide table for checking and adjustment			
	2. Structure of circuit block				
	3.	Relationship between the segments (Liquid Crystal Panel			
		electrodes) and C-MOS-LSI output terminals			
	4. Procedure for checking and adjustment				
		A. Check battery voltage			
		B. Check battery conductivity			
		C. Check current consumption			
		D. Check water resistance			
		E. Check contact of C-MOS-LSI ~ liquid crystal panel			
		F. Check liquid crystal panel and circuit block			
		G. Check accuracy			
		H. Check functioning and adjustment			
		I. Check conductivity of switch components			
		J. Check alarm function			
		75. TO A A 10. TH			


I. SPECIFICATIONS


Cal. No.	Y716A		
Display medium	Nematic Liquid Crystal, FEM (Field Effect Mode)		
Liquid crystal panel	Multiplex driving system		
Display system	 Time display Timer display Alarm time display Arbitrary timer display Time setting display 		
Additional mechanism	 Illuminating light Alarm test function Hourly time signal Timer function 		
	Fixed timer	Arbitrary timer	
	5 min. 15 min. 30 min. 45 min. 60 min.	99 min.	
	Pattern segment checking mode System reset function		
Loss/gain	Loss/gain at normal temperature range Monthly rate: Less than 15 seconds		
Casing diameter	24.7 mm (between 3 o'clock and 9 o'clock sides) 24.3 mm (between 6 o'clock and 12 o'clock sides)		
Height	5.1 mm		
Regulation system	Trimmer condenser		
Measusring gate by quartz tester	Any gate is available		
Battery	Lithium battery MAXELL CR2016, MATSUSHITA BR2016 or SANYO CR2016 Voltage: 3.0V Battery life: Approx. 3 years		

II. DISPLAY FUNCTION

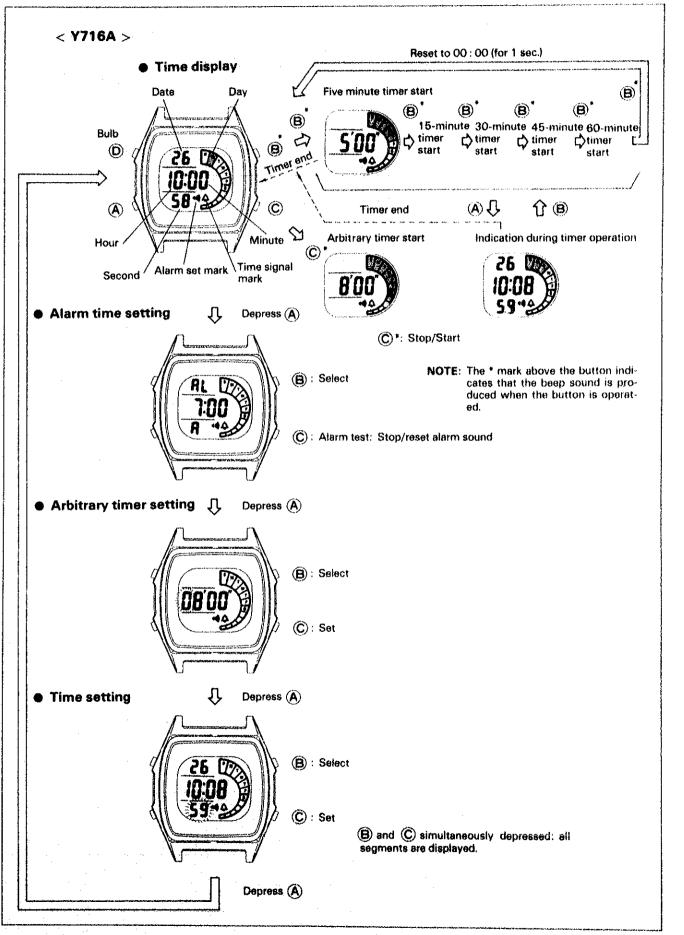


III. DISASSEMBLING, REASSEMBLING, LUBRICATING, AND CLEANING

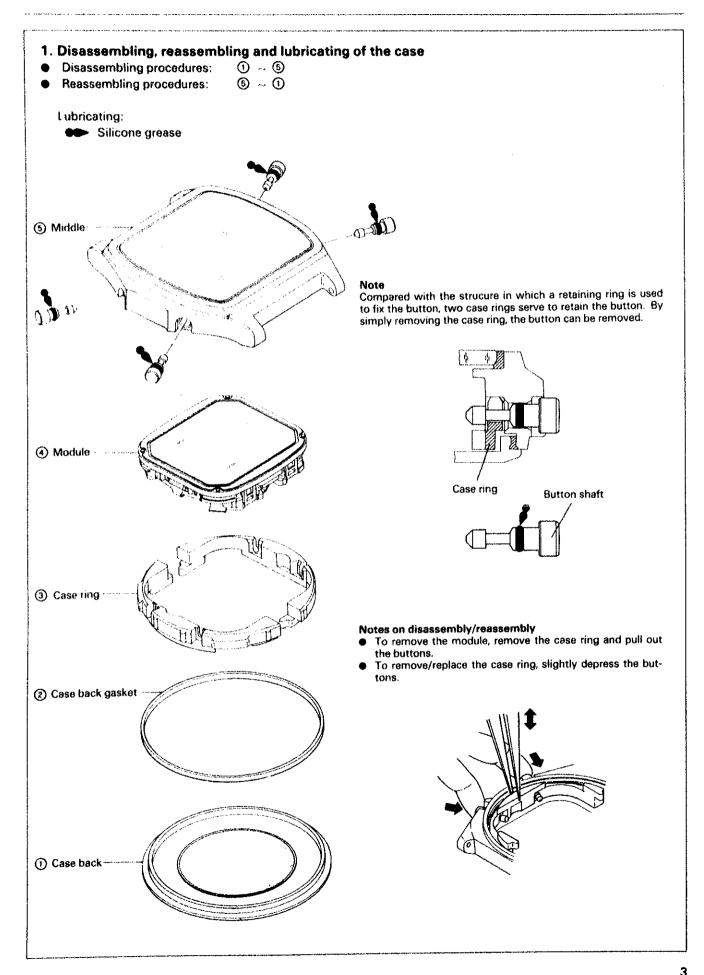

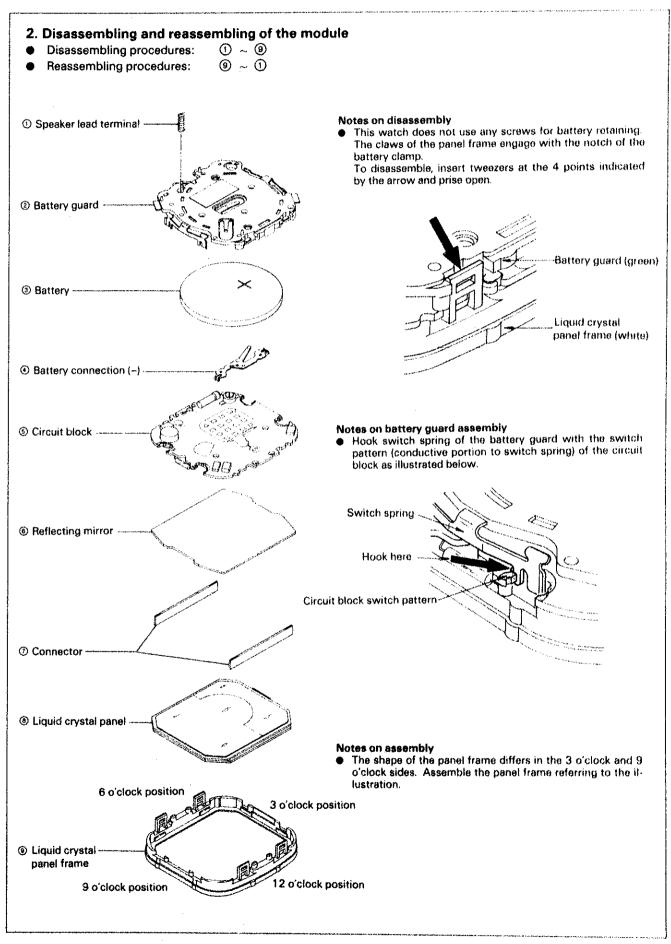


2. Disassembling and reassembling of the module


Disassembling procedures Figs.: (1) ~ (8)
Reassembling procedures Figs.: (8) ~ (1)

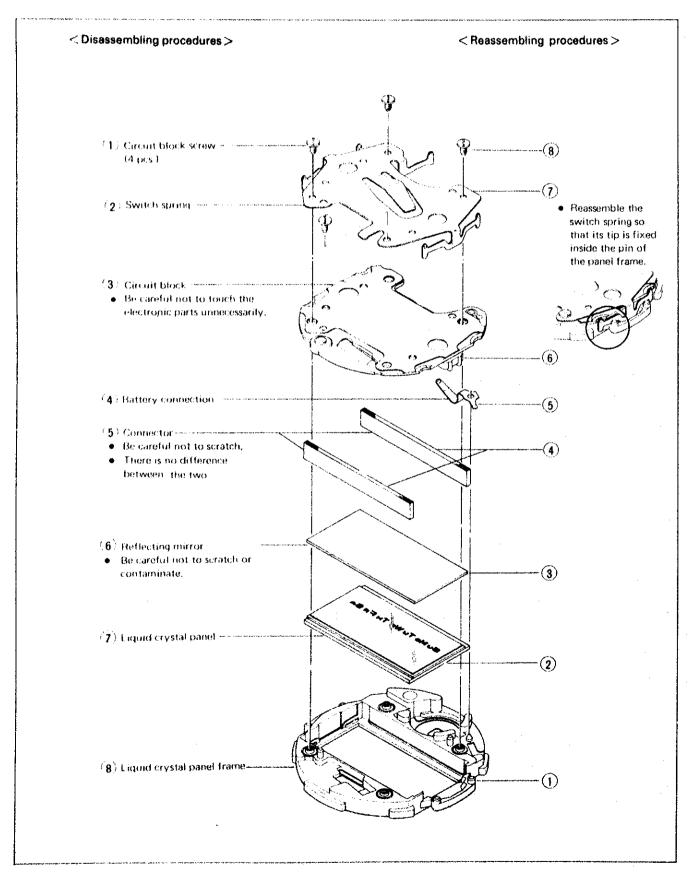

IV. CHECKING AND ADJUSTMENT


1. Guide table for checking and adjustment

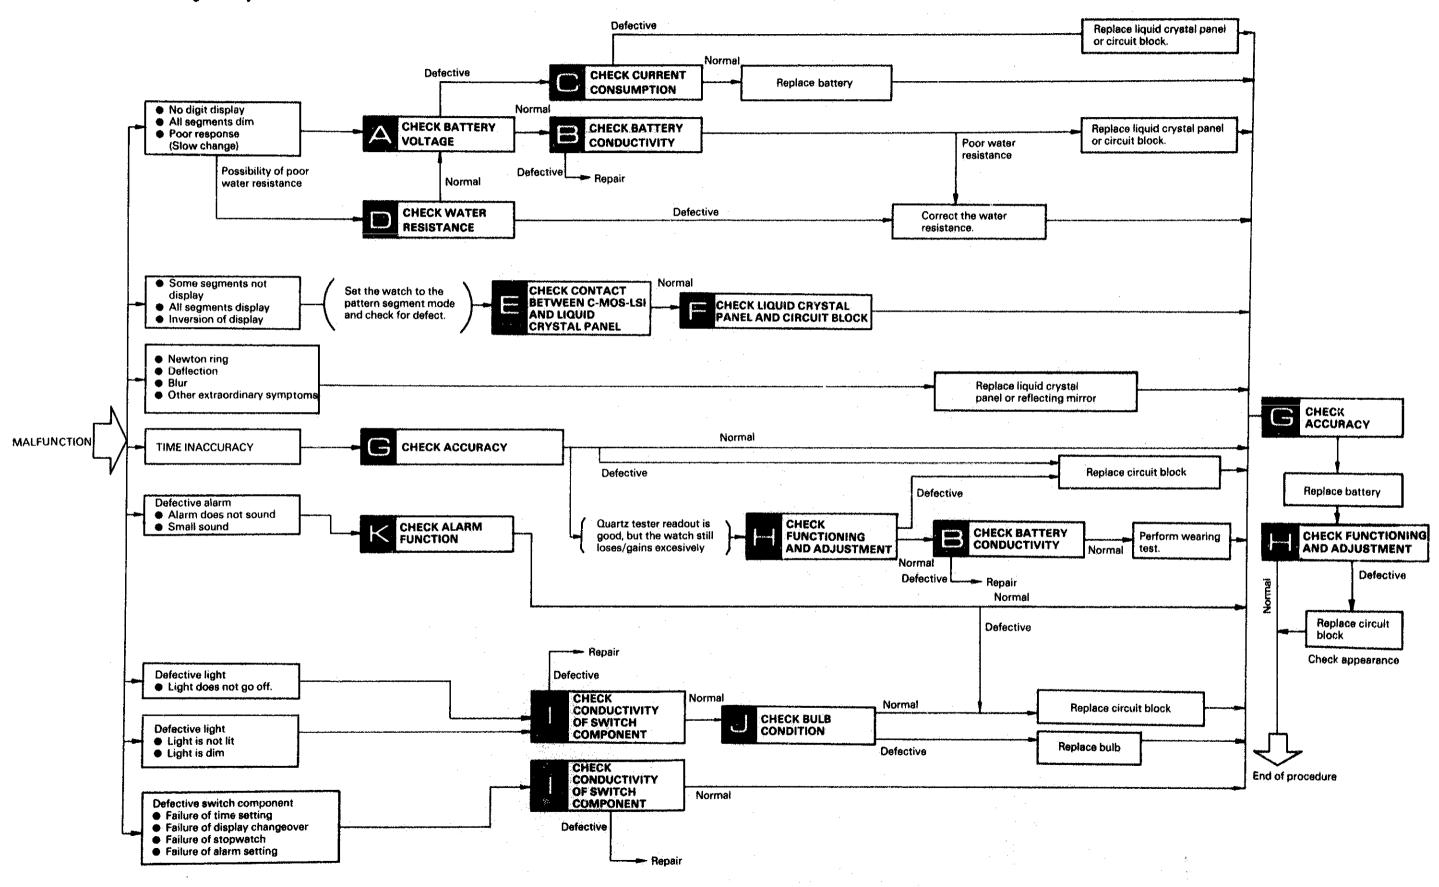

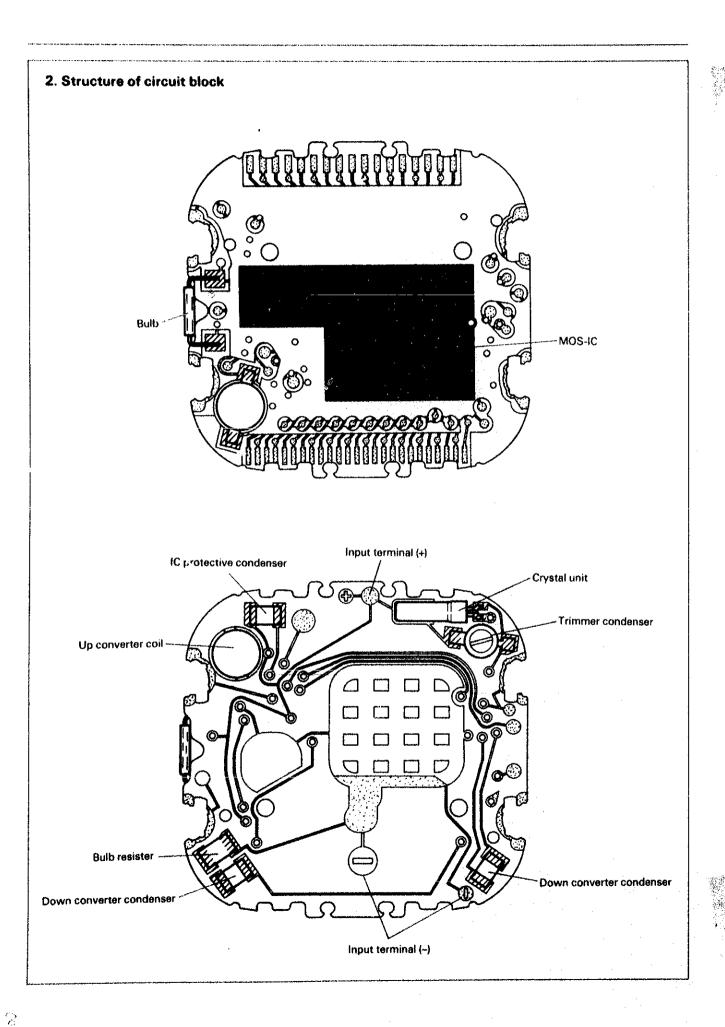




Disignation of segment

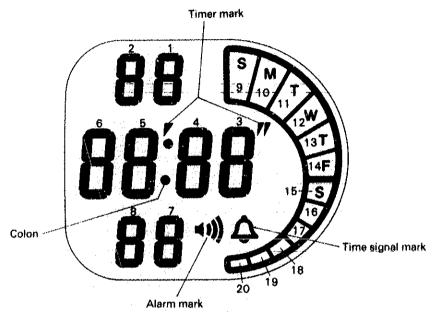


Relationship between the segments and C-MOS-LSI output terminals

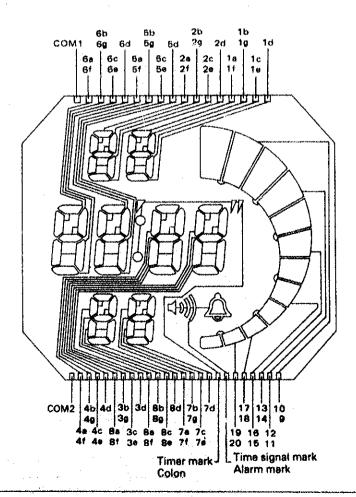

4. Procedure for checking and adjustment



BATTERY VOLTAGE

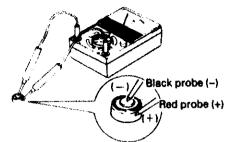

2.8V or more: Normal Less than 2.8V: Defective

Use the Volt-ohm-meter.

• Range to be used: DC 3V


Checking

● Red probe (+)... Battery surface (+)
Black probe (-)... Battery surface (-)

BATTERY CONDUCTIVITY

BATTERT CONDUCTION

Check the battery, battery clamp and battery connection (-) for contamination.

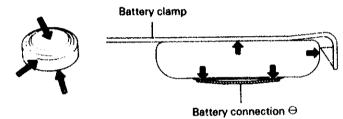


Contaminated: Clean
Poor water resistance is found:
Correct water resistance.

 \blacksquare

CURRENT CONSUMPTION


- (1) Current consumption of the whole of module.
 - Connect the module as shown below.
 NOTE: Set the condenser kit of more than 50 μF to both terminals of the Volt-ohm-meter.

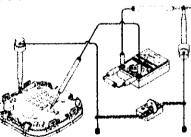

Less than 2.2 μA: Normal 2.2 μA or more: Defective Proceed to (2)

(2) Current consumption of circuit block alone.

- Measure the current consumption of circuit block in the same manner as those of whole module.
- Connect the module as shown below.

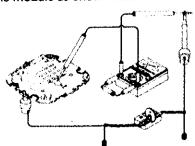


Less than 1.7 μA: Normal Replace liquid crystal panel. 1.7 μA or more: Defective Replace circuit block.

WATER RESISTANCE

Check for moisture in the watch.

(1) Place the watch on a hot plate and heat it for 15 minutes.

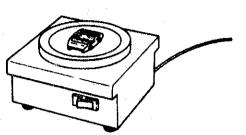

(2) Check that the glass does not collect moisture.

Does not collect moisture:
Normal
Collects moisture: Defective


Correct water resistance.
Refer to "Watch Case Servicing Guide".



CONTACT C-MOS-LSI ~ LIQUID CRYSTAL PANEL


Check for dust, lint other contamination of the liquid crystal panel electrodes and connectors.

Check the liquid crystal panel and connector for scratches, cracks or defects.

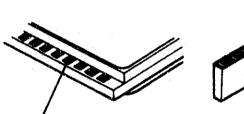

Liquid crystal panel electrode

Especially check for the contact between liquid crystal panel and circuit block.

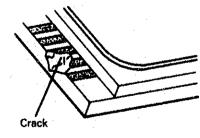

Contaminated:

Wipe off any foreign matter.

Defective:

Replace the liquid crystal panel or connector.

F

LIQUID CRYSTAL PANEL AND CIRCUIT BLOCK


- Refer to "Relationship between the segments (Liquid Crystal Panel electrodes) and C-MOS-LSI output terminals" on page 9
- (1) Checking the liquid crystal panel
 - 1. Use the Volt-ohm-meter.

Range to be used: OHMS $R \times 1 \sim R \times 1K$

NOTE:


Any range will do if more than 3V is applied to the terminal of the Volt-ohm-meter. In some Volt-ohm-meters, a voltage of more than 3V cannot be applied to the terminal. In this case, all segments are not displayed. Use a higher resistance range ($R \times 10K$).

- 2. Remove the liquid crystal panel from the module and turn it to the reverse side.
- 3. Check that the corresponding segment is displayed.

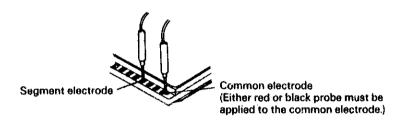

Not displayed: Defective Replace the liquid crystal panel.

- (2) Checking the circuit block output
 - 1. Disassemble the module and remove the circuit block.
 - 2. Use the Volt-ohm-meter. Range to be used: DC 3V

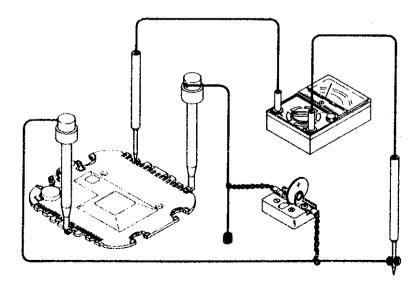

- to be continued -

0,8V or more: Normal 3. Red probe (+): Circuit block (+) terminal (The voltage at all terminals Black probe (-): C-MOS-LSI output terminal should be more than 0.8V.) (If a segment is defective, connect the black Less than 0.8V: Defective probe to the corresponding electrode.) Replace the circuit block. **ACCURACY** Monthly rate: Any measuring gate can be used. Less than 15 seconds: Nor-Check accuracy in the pattern segment checking mode. Pattern segment checking mode Set the watch to the time setting mode and press buttons B and C More than 15 seconds: Desimultaneously to obtain the pattern segment checking mode. fective Replace the circuit block. **FUNCTIONING AND ADJUSTMENT** Does not function correctly: Check functioning referring to "DISPLAY FUNCTION" on page 2. (1) Check that the time mode and alarm mode are changed correctly. Replace the sircuit block. (2) Perform alarm test and check that the alarm sounds correctly and alarm mark is displayed correctly. (3) Check the functioning for each digit in the time and calendar modes and confirm that the digit is advanced correctly. CONDUCTIVITY OF SWITCH COMPONENT (1) Check that the switch spring functions correctly. Does not function correctly: Correct the switch spring with tweezers or replace the battery guard with a new one. Check that the circuit block comes into contact with the switch section. Battery frame switch section (2) Check for dust, lint and other contamination of the connecting Contaminated:

portions.


LIQUID CRYSTAL PANEL AND CIRCUIT BLOCK

Wipe off any foreign matter.

ALARM FUNCTION

- (1) Check the contacting portion of the piezo electric element on the case back and speaker lead terminal.
 - Check the speaker lead terminal for deformation.
- (2) Measure the up converter coil resistance of the circuit block. Range to be used: OHMS R x 1
 - Checking

Apply the probes to the up converter coil terminals. Either red or black probe will do.

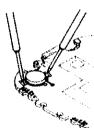

Contaminated:
Wipe off any foreign matter.
Deformed:

Correct with tweezers.

 $50\Omega\sim 90\Omega$: Normal Less than 50Ω : (Short-circuit) More than 90Ω : Defective (Broken wire) Replace the circuit block with a new one.

VI. PARTS LIST

for Cal. Y716A

PART NO.	PART NAME
4001 873	Circuit block
4246 871	Speaker lead terminal
4270 871	Battery connection ()
4313 872	Connector
4395 974	Battery guard
± 4510 575	Liquid crystal panel
+ 4410 576	Liquid crystal panel
4512 575	Liquid crystal panel frame
4521 911	Reflecting mirror
4530 230	Bulb
MAXELL CR2016 MATSUSHITA BR2016 SANYO CR2016	} Lithium bettery

Remarks:

Liquid crystal panel

*****4510 575

★4510 576

The type of liquid crystal panel is determined based on the design of case.